Plant Maintenance

FEDERATION

Every piece of plant and equipment that we use at work requires maintaining to make sure it works efficiently and safely.

Some maintenance jobs need doing every day and some only once or twice a year.

Any items noted as faulty during the maintenance checks must be notified to the plant yard (or the owner of the equipment) as soon as possible. This will allow an assessment to be made of how urgent the work is & schedule it in.

The exact maintenance requirements will be detailed within the operators manual however as a general guide:

Daily

- 1. Check oil levels.
- 2. Check fuel levels and filters.
- 3. Check air filters.
- 4. Check and grease where required.
- 5. Check all securing nuts.

Weekly

- 1. Check all ropes, strops and other lifting accessories attached to the equipment.
- 2. Check tyre pressures or track condition.
- 3. Check all lights (both internal & external).
- 4. Check all mirrors and other visual aids.
- If you are unsure what the maintenance requirements for any piece of plant are then ask.



- **Q.** When should maintenance be carried out?
- Q. Where are the maintenance requirements detailed?
- Q. How often should you check securing nuts?